
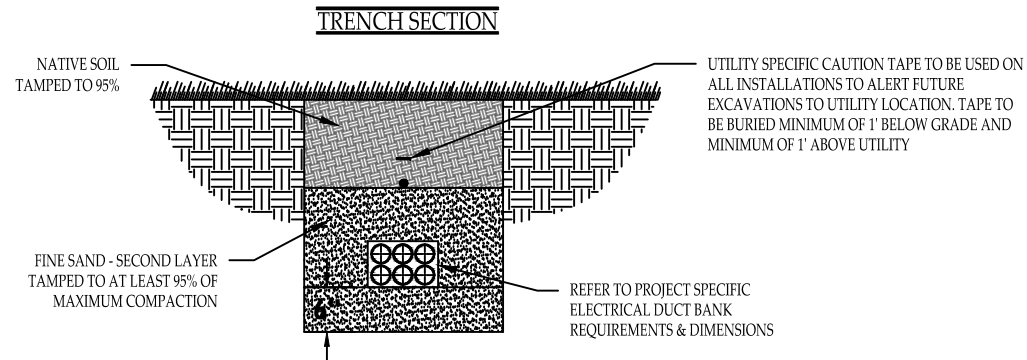


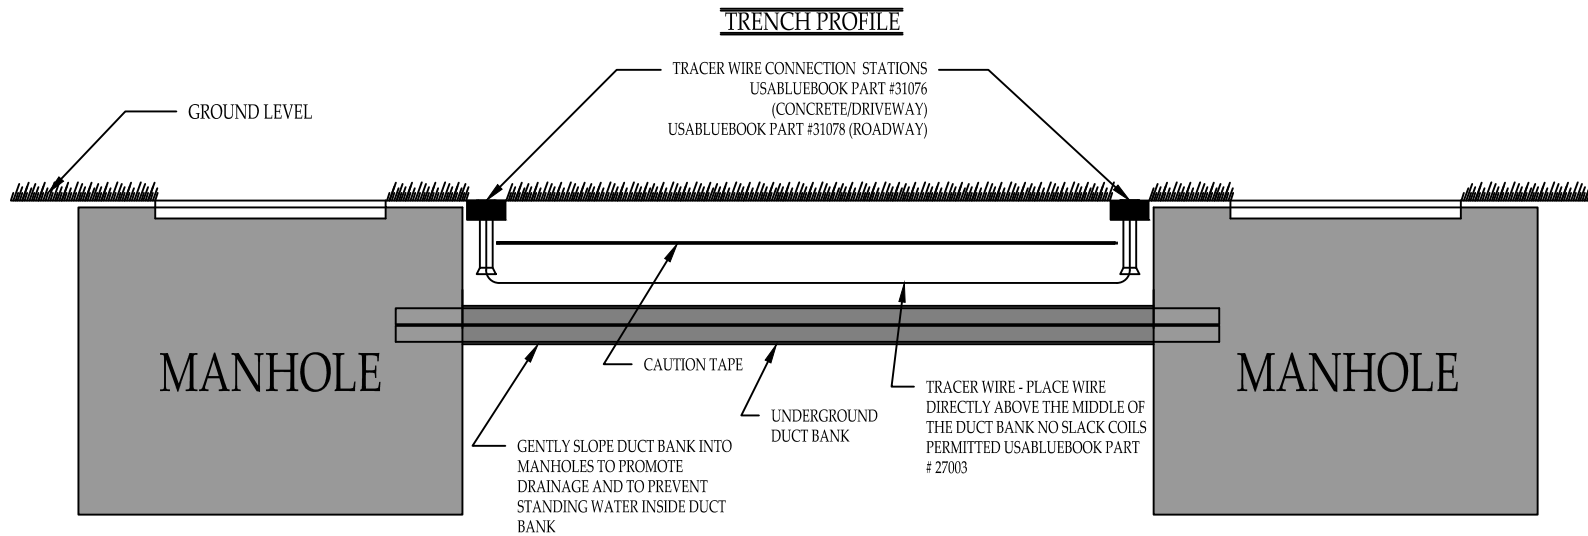

NOTES:

- TRACER WIRE MUST LAY FLAT AND STRAIGHT. NO COILS MAY BE PRESENT
- ALL CONNECTIONS MUST BE SOLDERED AND WATERTIGHT
- TAPE MUST NOT BE DAMAGED OR TORN
- TRACER WIRE RUN MUST NOT EXCEED 300' WITHOUT ADDITIONAL TEST STATION

DRAWN BY: TCS
CHECKED BY: GB
SCALE: N.T.S.
DATE: 09/12/25

ELECTRICAL CONDUIT & TRACER INSTALLATION